

## Using multiple *Universal Accessory Decoders* on a layout

This is a reminder that the *Universal Accessory Decoder*, when attached to the main line, uses Ops Mode commands for programming the various output personalities.

The *Universal Accessory Decoder* appears to the command station as a Locomotive with address #99 for programming purposes, as described in this manual.

It is important to remember that only one Locomotive address can be on the main line at any one time, therefore, when programming a *Universal Accessory Decoder* you must turn off any other *Universal Accessory decoders* that are also attached to the main line. This will prevent an address conflict and any improper programming errors.